

Fitting Instructions for Panel Blinds


If installing on plaster or wallboard where possible pick up timber stud. If unable to locate stud, use a suitable wall plug or toggle for plasterboard to hold the brackets.

Face Fix Installation

Screw the brackets to the face of the architrave, evenly spaced to properly support the weight of the blind. The face fix brackets can be adjusted forwards and backwards to achieve the desired position.

Position the clips so the longer tag of the clips is towards the back. Clip in to back of the track first and then push up to lock in the front.


Bracket adjustment screw

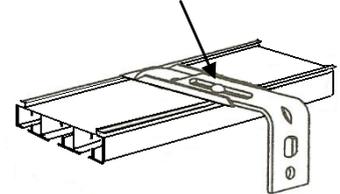

Recess Fix Installation

Screw the clips to the ceiling of the recess in the desired position, evenly spaced to properly support the weight of the blind. Make sure the longer tag of the clips is towards the back.

Clip in the back of the track first and then push up to lock in the front.

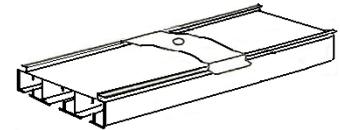

Attach the Panels to the Track

Unroll the panels making sure you keep them together. Do not crease the fabric, keep them laying flat. Attach your first slat to your first carrier slide. This will be the fixed back carrier. Then attach the next panel, in order, to the next carrier. Repeat this process until all panels are attached to the track.


For a centre opening track, the process is similar, start from the back carriers moving to the front from both ends.

How to install the Cord Tension device

The Tension Device reduces the chance of strangulation by limiting access to the control cord or chain. When fitted properly it should hold any looped controls firmly tensioned against a wall or window frame. This should make it hard for a young child to fit through the controls.

Clip the cord / chain through the bottom of the Tension Device. Position the Tension Device on the window frame or wall in a position that will not compromise the operation of the control cord / chain. Make sure the controls are not twisted when the Tension Device is in the mounting position.

Ensure that there is SUFFICIENT TENSION on the chain/cord – however excessive tension will impair smooth operation of the blind. Hold the Tension Device in the correct position, as shown. Insert and secure the screw through hole. Make sure the screw is affixed into a solid surface.

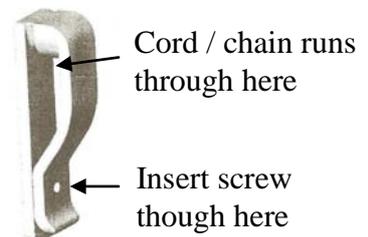

⚠ WARNING

WARNING: Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from window covering cords or chains. Do not remove this label

