

Fitting Instructions for Clear PVC Outdoor Blinds



Caution: Leave the PVC in its packaging until you are ready to install it. This will help prevent it from becoming damaged or dirty

Attach the PVC blind to the frame

Pre-drill holes in your Rope Tracks approx 300mm apart. Slide the top rope track onto the top of the PVC. Determine the height where the Rope Track will be fixed and hold the blind up to this level. Screw in the centre of the Rope Track. You can then unroll your blind. Fix the rest of your Rope Track points making sure the Track runs level across the top.



Slide on one side Rope Track from the bottom of the blind to the top. Butt the side Track against the top Track and secure it to the wall. Make sure the PVC is hanging straight down when doing this. Repeat for the other side, making sure the PVC is not stretched too tight across the width when fastening. If the PVC is stretched too tight it puts excess pressure on the zips.

Fixing the Rope to the blind

Attach the pulleys above the top Rope Track roughly 450mm in from each end. The double pulley should be fixed on the side the controls will be.


Pull up both zips to the top of the blind. Seal one end of the Rope with a lighter. Attach the sealed end of the Rope to the roof of the frame directly under the single pulley about 20mm back from the blind using a screw through the Rope 20mm from the end.

Use a sharp blade to cut a slit in the bottom flap of the blind directly under the pulley. Cut up to the bottom of the bottom rail. Cut two small slits about 20mm long at the top of the main slit forming a Y.

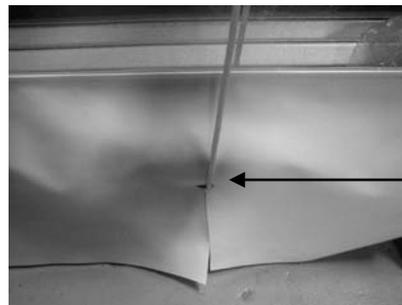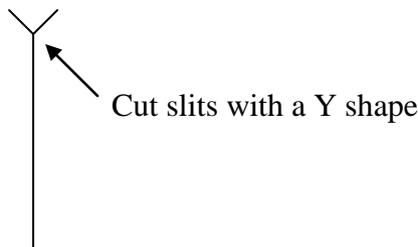

The rope runs through the top of the Y slit

Feed the cord up through the single pulley starting from the side closest to the edge of the blind and heading towards the centre. Feed the Rope through the back of the double pulley starting from the inside side and feeding out the side closest the edge. Pull through all excess Rope and then feed it back through the front of the pulley starting from the side closest to the edge and leading back towards the centre. Pull the Rope through but leave enough to form a control loop. The control loop should hang about half way down the blind but remain out of reach of small children.

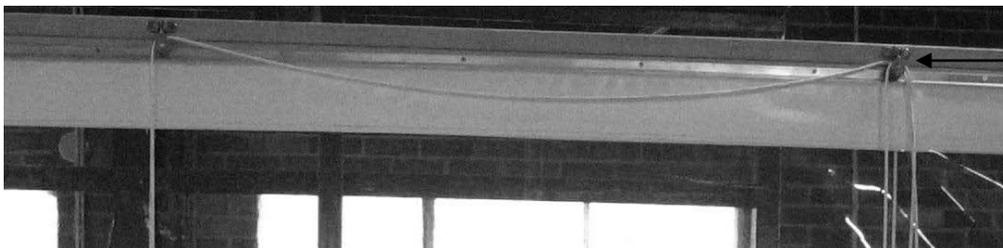


Control cord feeding through at the back, formed a loop and back through the front on the same side

Slit the bottom flap directly under the pulley in the same fashion as the first one. Feed the Rope through the slit and up to the top of the blind under the pulley. Make sure there is enough control cord still hanging down before fastening the rope to the roof behind the pulley as before. Cut off excess Rope about 20mm from the screw and seal the end with a lighter.

Fitting Instructions for Clear PVC Outdoor Blinds

Attach the Hold Down Straps

Slide the Strap Adapters into the bottom rail end caps and secure with a screw. Fit the Breaching Staples to the floor directly under the Strap Adapters. Use the Straps to secure the Strap Adapters to the Breaching Straps when the blind is down. This secures the bottom rail and eases stress on the zips caused by wind blowing the blind around.

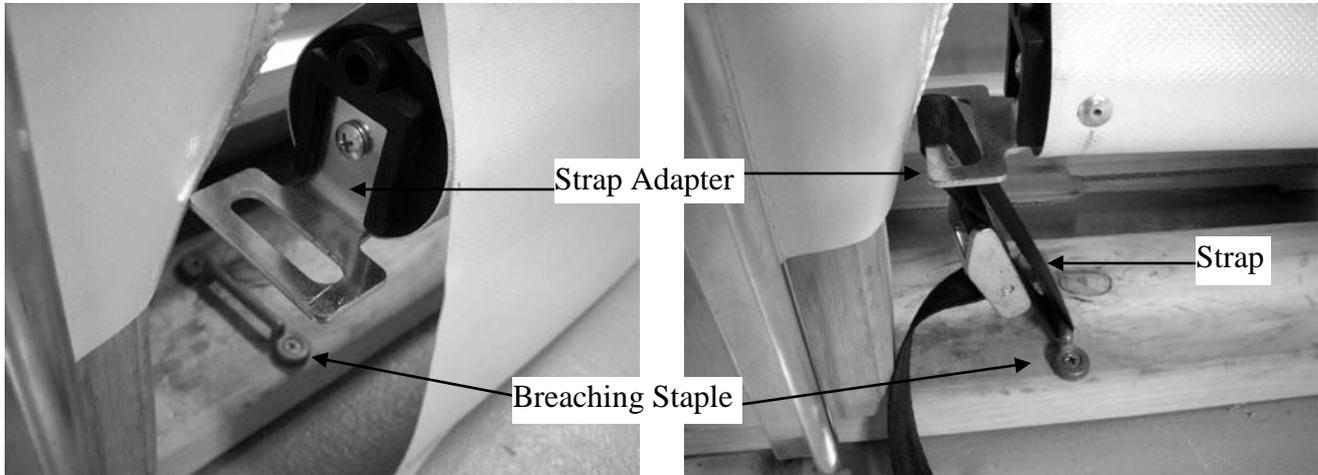


Attach the Cord Cleats

The Cord Cleats should be attached along side the blind one above the other about 500mm apart. The lowest Cleat is less than 1600 mm above floor level – to prevent a child from unwinding a cord from a cleat. When the blind is in the raised or lowered position, all excess cord should be wrapped around cleats in a figure 8 motion to secure them out of, keeping them out of reach of children and neatly off the floor or furniture.

1. Position the Cleat against the window frame / post in a place that is accessible to the user while remaining inaccessible to small children.
2. Fasten the Cleat with the two screws provided. The two cleats to be 500 mm apart, one above the other.

The Cord Cleats attach vertically

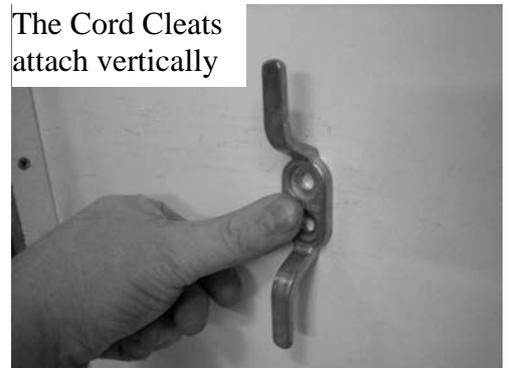

This device will not prevent strangulation if young children wrap pull cords around their necks.

⚠ WARNING

WARNING: Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from window covering cords or chains. Do not remove this label

